

HANDLEBAR


HANDLEBAR REMOVAL

Remove the wire harness bands and the throttle grip.
Remove the front brake and manual decompressor lever.
Remove the clutch lever and the engine stop switch.
Remove the handlebar holder bolts and the handlebar.



HANDLEBAR INSTALLATION

Install the handlebar.
Align the punch mark on the handlebar with the top of the lower holders.

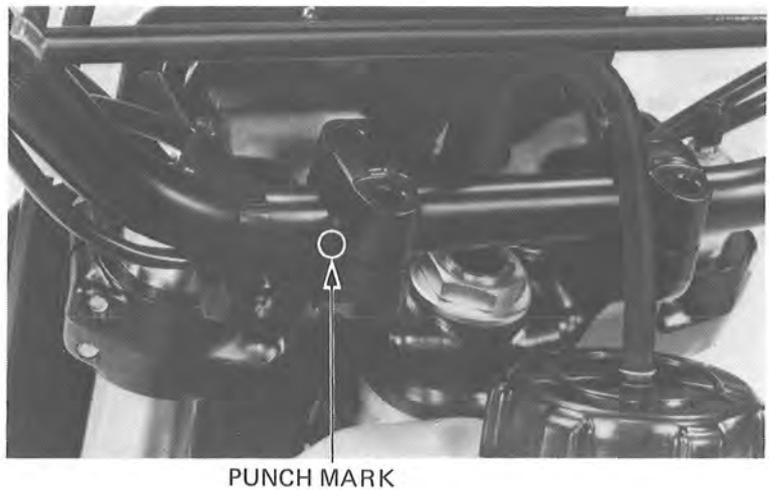

Place the upper holders on the handlebar with the punch marks facing the front.

Tighten the forward bolts first, then tighten the rear bolts.

TORQUE: 18–30 N·m (1.8–3.0 kg·m, 13–22 ft·lb)

