


Stake the bearing retainer as shown.



### REAR WHEEL INSTALLATION

Place the rear wheel into the swing arm locating the tang on the swingarm into the slot on the brake panel.  
Set the stopper pin to the pin on the swingarm.

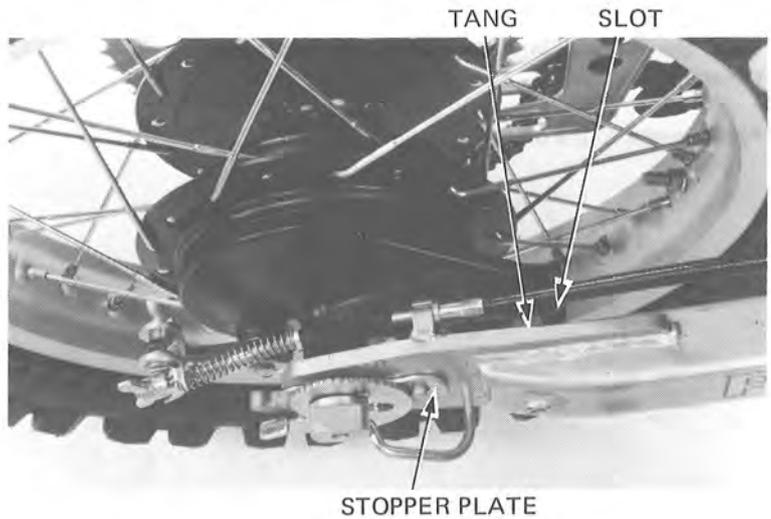

Run the chain over the final sprocket.  
Turn the right and left adjuster plates.

**CAUTION:**

*The same index mark on both sides should align with the pins on the swingarm.*

Adjust the drive chain (Page 3-13).

