

REAR WHEEL/BRAKE/SUSPENSION

Position the shock arm on the swingarm and loosely install the pivot bolt.


NOTE

- Be sure that all grease fittings face the outside.

Install the shock link to the frame and tighten the pivot bolt.

TORQUE:

Shock link-to-frame: 70 N·m (7.0 kg-m, 51 ft-lb)

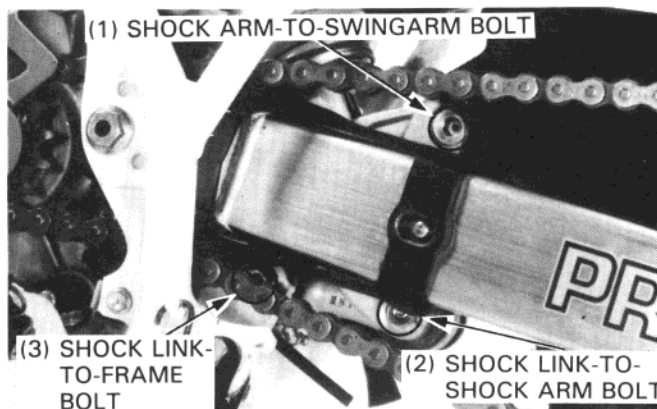

Connect the shock link to the shock arm with a pivot bolt. Tighten the shock arm pivot bolts.

TORQUE:

Shock arm-to-swingarm: 45 N·m (4.5 kg-m, 33 ft-lb)

Shock arm-to-shock link: 45 N·m (4.5 kg-m, 33 ft-lb)

Install the rear shock absorber (page 13-28).

Install the air cleaner, side covers and seat.