



Do not twist the brake hose. Install the rear brake caliper to the slide rail on the swingarm.

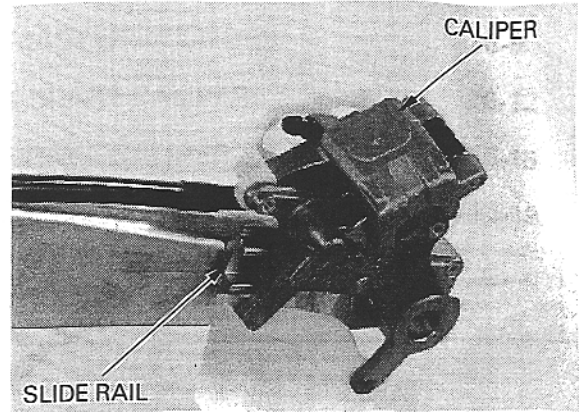

Install the brake hose guides.
Install and tighten the screws.

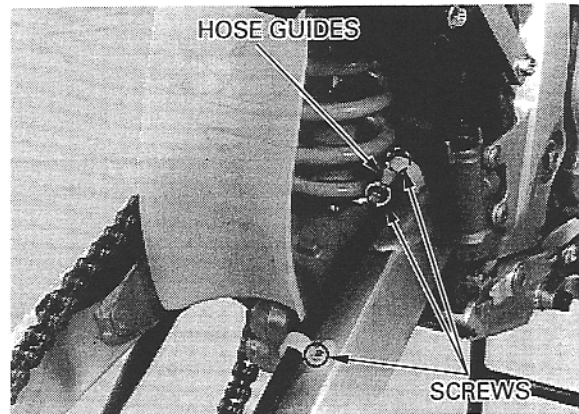

Install the shock arm bolts and nuts.
Tighten the nuts to the specified torque.

TORQUE:

Shock arm nut (shock link side):

69 N·m (7.0 kgf·m , 51 lbf·ft)

Shock arm nut (swingarm side):

78 N·m (8.0 kgf·m , 58 lbf·ft)

Install the rear wheel (page 15-8).

