
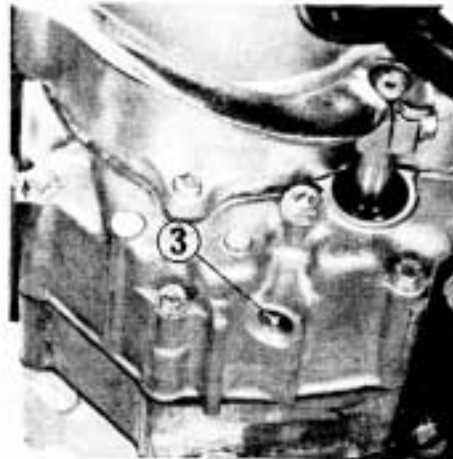


## CAM CHAIN ADJUSTMENT

An improperly adjusted cam chain will rattle and be noisy, and will adversely affect the engine. Adjust tension while the engine is idling and the parking brake is locked ON.

1. To adjust, loosen the lock nut ① and tensioner adjusting bolt ② approximately one half turn.
2. If the chain is still noisy even after adjustment, loosen the 14 mm sealing bolt located on the left bottom side of the crankcase, and turn in the tensioner bolt ③ gradually until the cam chain becomes quiet. After completing the adjustment, tighten the tensioner adjust bolt, lock nut, and 14 mm sealing bolt securely.

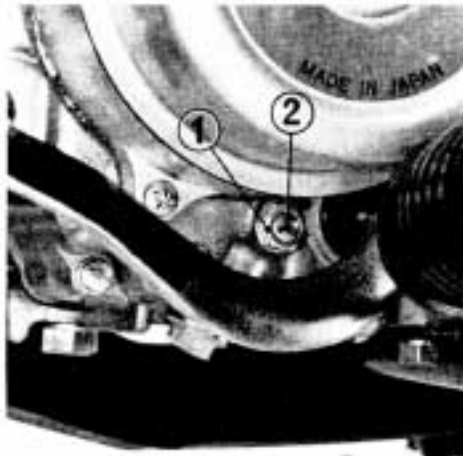

① Lock nut    ② Tensioner adjusting bolt    ③ Tensioner bolt