



3. Minor adjustment can also be made with front brake cable adjuster ⑥ on the front brake lever by turning in the same direction as above.

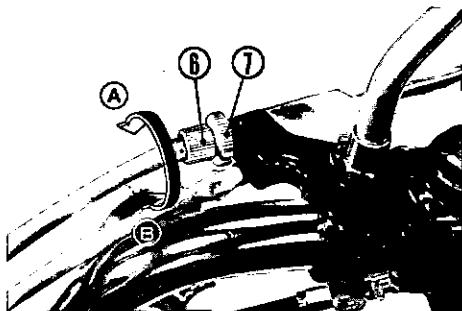

- ⑥ Front brake cable adjuster
⑦ Lock nut

Rear brake Adjustment:

1. Raise the rear wheel off the ground by placing the motorcycle on its center stand.
2. The stopper bolt ① is provided to allow adjustment of the pedal height. To adjust the rear brake, loosen the lock nut ②, and turn the stopper bolt.

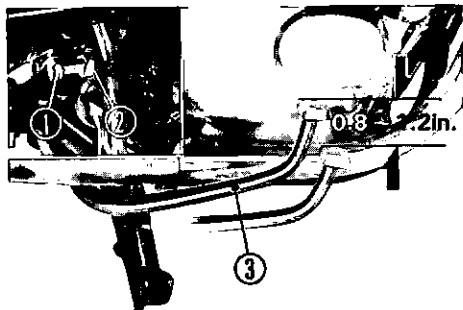

- ① Pedal stopper bolt ② Lock nut
③ Rear brake pedal