


● Rear Brake (Control) Pedal


The rear brake pedal ① is located at the right foot rest. Application of the rear brake is effected by depressing the pedal with a force proportional to the braking effort required. If pedal free travel is excessive, see page 66 for inspection and servicing. Normal free travel is approximately **1 in. (25 mm)**.

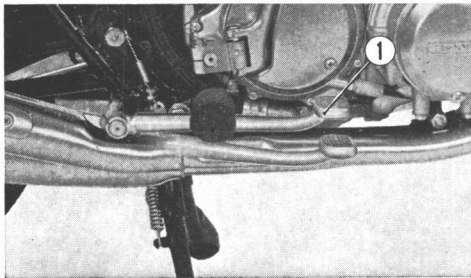

① Rear brake pedal

● Clutch (Control) Lever

The clutch lever ② is located at the left handle grip. Squeezing the lever towards the handle bar grip disengages the clutch. Gradually releasing the lever will result in smooth clutch engagement. The clutch lever should have **0.4~1.0 in. (10~25 mm)** free play measured at the lever end. See page 46 for adjustment information.

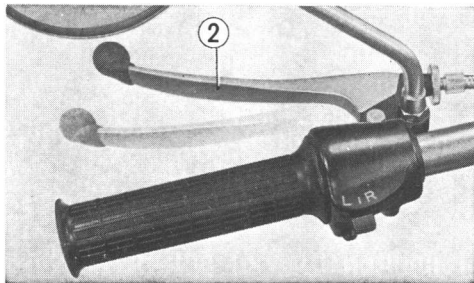

② Clutch lever