


Measure the clearance (9) between each surface of the brake disc (10) and the caliper holder (11) with a 0,7 mm (0,028 in) feeler gauge (12) (see illustration).

If the gauge inserts easily, tighten the right and left axle pinch bolts (5) to the specified torque.

Axle pinch bolt torque :

22 N·m (2.2 kg-m , 16 lb-ft)

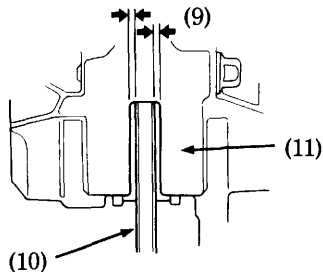


(9) Clearance
(10) Brake disc

(11) Caliper holder

▲ WARNING

*** If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.**

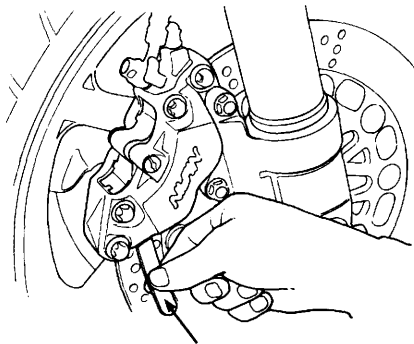

(12) Feeler gauge (12)