



Installation

1. Install the fuel tank on the frame.
2. Install the fuel valve (1) and tighten the fuel valve bolt (2).
3. Connect the fuel line (3) to the fuel valve.

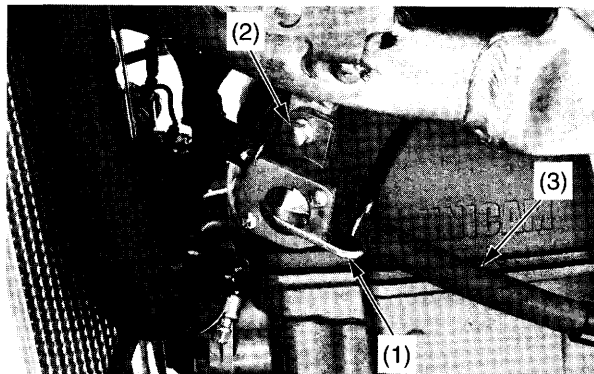


(1) fuel valve
(2) fuel valve bolt
(3) fuel line

4. Install and tighten the fuel tank bolt/collar (4).
5. Install and hook the fuel tank band (5).
6. Hook the air cleaner case cover (6).

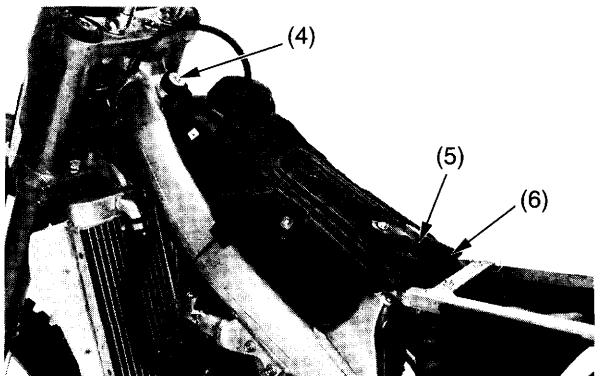


(4) fuel tank bolt/collar
(5) fuel tank band
(6) air cleaner case cover

7. Put the breather tube (7) in the steering stem nut.

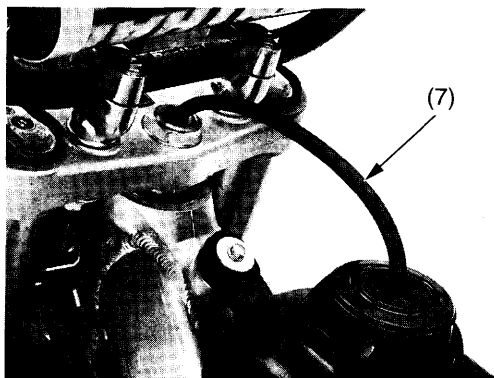


(7) breather tube

8. Install the shrouds (8) by aligning its tab (9) with subframe (10).

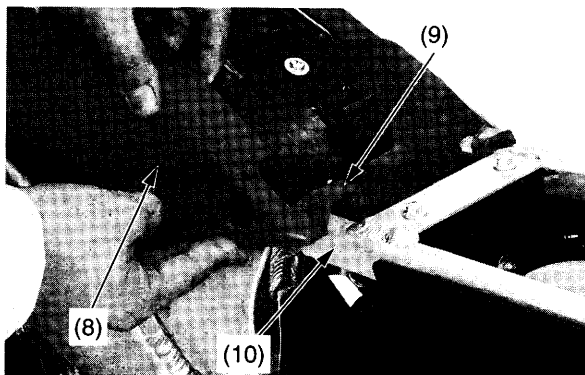

(8) shrouds
(9) tab
(10) subframe

9. Install the shroud B bolts (11) and A bolts/collars (12).

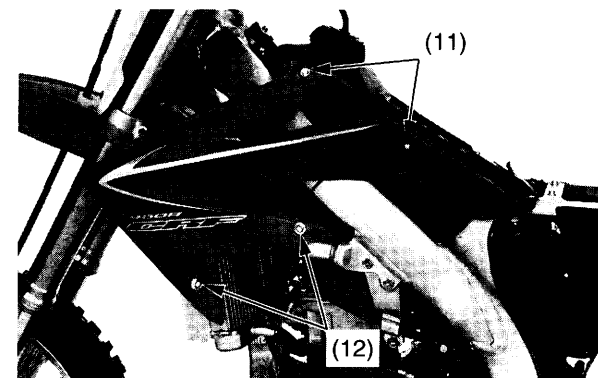

(11) shroud B bolts
(12) shroud A bolts/collars

10. Install the seat (page 29).