


## Rear Brake

### Brake Adjustment:

1. Place the motorcycle on its side stand.
2. Measure the distance the rear brake pedal (1) moves before the brake starts to take hold.


Freeplay should be:

10–20 mm (0.4–0.8 in)

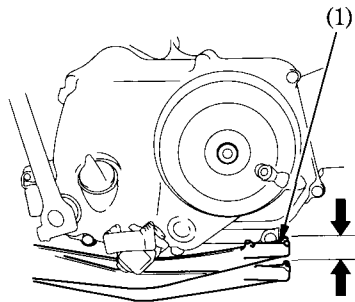

(1) Rear brake pedal

3. If adjustment is necessary, turn the rear brake adjusting nut (2).

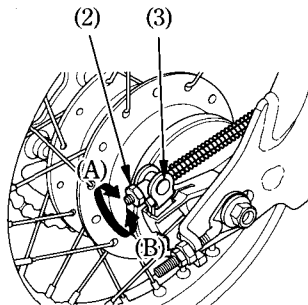

- (2) Rear brake  
adjusting nut  
(3) Brake arm pin

- (A) Decrease freeplay  
(B) Increase freeplay