


### Brake pads:

Brake pad wear will depend upon the severity of usage, type of driving, and condition of the roads. The pads will wear faster on dirty and wet roads. Inspect the pads visually during all regular service intervals to determine the pad wear. Remove the inspection hole cap. If either pad wears to the red line (1), both pads must be replaced.

### Other items:

Make sure that there are no fluid leaks and no deterioration at the hose and the joint.

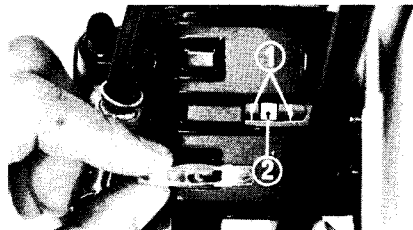


(1) Red lines

(2) Brake disc

### Rear brake

#### Adjustment:

1. Place the motorcycle on its center stand.
2. A stopper bolt (1) is provided to allow adjustment of the pedal height. Loosen the lock nut (2), and turn the stopper bolt. Tighten the lock nut.

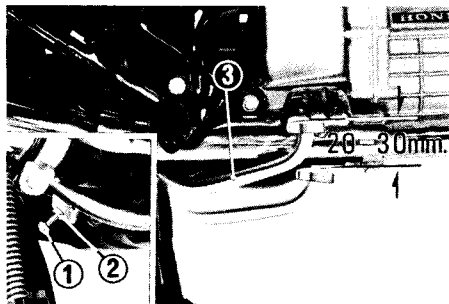

(1) Stopper bolt

(2) Lock nut

(3) Brake pedal