
Rear Wheel Removal

- 1. Place the motorcycle on its center stand.
- 2. Remove the lower bolts + (one on each side) attaching the rear shock absorbers.


NOTE: When the bolt is removed, support the wheel with a suitable block so that the axle will not interfere with the mufflers.

3. Remove the bolt @ attaching the rear brake caliper assembly 3 and support it.

- 4. Remove the cotter pin 4 from the axle and unscrew the rear axle nut 5.
- 5. Raise the wheel so that the rear axle is above the muffler and then pull out the rear axle.
- 6. Move the wheel to the left side to separate it from the final drive gear case. Remove the rear wheel.

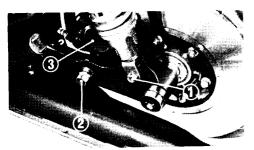

- i. Absorber attaching bolt
- (2) Caliper attaching bolt
- (3) Caliper assembly

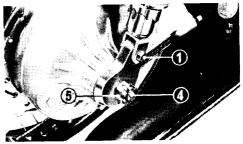

- 4 Cotter pin
- 5) Axle nut