


Tail/stoplight Bulb Replacement

1. Remove the two screws retaining the tail/stoplight lens.
2. Press the bulb ① inward and twist to the left and the bulb can be removed.
3. Replace with a good bulb.
4. Reinstall tail/stoplight lens.

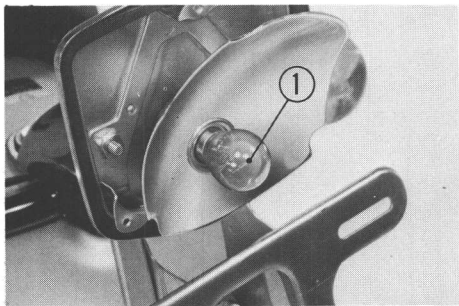


① Tail/stoplight bulb

Decarbonizing

Carbon deposits on the cylinder head, combustion chamber walls, piston crown and ring grooves, exhaust port, the front part of muffler, diffuser pipe, etc. may result in reduced horsepower or in overheating. Decarbonize the above parts in accordance with the maintenance schedule.

Muffler and Diffuser Pipe :

Remove the muffler, and decarbonize the cylinder side of the muffler. Disconnect the diffuser pipe from the muffler chamber and decarbonize it.

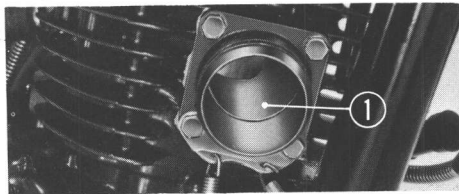

① Exhaust port