

STARTING THE ENGINE

WARNING

- * *Exhaust gases contain poisonous carbon monoxide. Never run the engine in a closed garage or confined area.*
- * *Attempting to start the engine with the transmission in gear and the clutch engaged may result in injury or damage.*

NOTE:

- * This motorcycle can be kickstarted with the transmission in gear by disengaging the clutch before operating the kickstarter.

1. Turn the fuel valve to ON.
2. Insert the key in the ignition switch and turn to ON.
3. Shift the transmission into neutral. The neutral indicator (green) should go on.
4. Make sure the engine stop switch is at RUN.

WARNING

- * *Fold up the right footpeg before using the kickstarter, or you may injure your leg.*


5. Move the choke lever (1) all the way up to ON, if the engine is cold. When the engine is to be re-started while it is still

warm, the use of the choke is not necessary.

6. Operate the kickstarter with a rapid, continuous motion, leaving the throttle closed.

To restart a warm engine, open the throttle slightly (approx. 1/8—1/4 of the throttle grip rotation) and operate the kickstarter with a rapid, continuous motion.

7. Warm up the engine for a half minute (for a few minutes in low air temperature) until it runs smoothly with the choke 2 lever OFF.

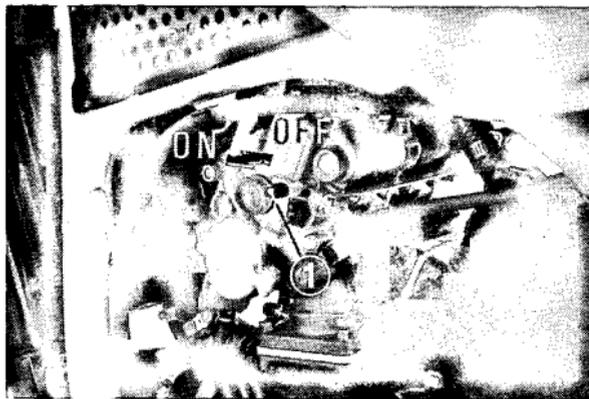

(1) Choke lever