
Raise the choke lever to the full closed position

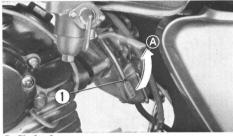

1 Choke lever

4. Twist the throttle grip inward slightly and operate the kick starter with the right foot, starting from the top of the stroke and following through to the bottom with a rapid and continuous kick. Operate several times until engine starts.

If the engine fails to start after several repeated attempts, turn off the main switch and lower the choke lever to the full open position, twist the throttle grip inward fully and crank the engine using

the kick starter pedal.

This is then followed by turning the main switch to the "ON" position and following the starting procedure outlined in steps 1 through 4, however, at this time the use of the choke is not necessary.

After the engine starts, operate at approximately 1,500 rpm until the engine properly responds to the throttle with the choke fully open.

## Starting in Extremely Cold Weather

Prime the engine before starting by cranking several times with the kick starter pedal. The main switch should be turned "OFF", the choke fully closed and the throttle opened. Followed by the procedure for starting a cold engine.

## Starting a Warm Engine

When the engine is to be re-started while it is still warm, proceed as for cold engine starting, however, the use of the choke is not necessary.