


Clutch System

Clutch Adjustment

Refer to *Safety Precautions* on page 71 .

LEFT HANDLEBAR

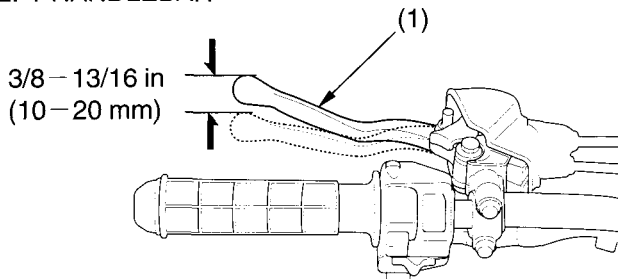

(1) clutch lever

Clutch adjustment may be required if the ATV stalls when shifting into gear, if it tends to creep, or if the clutch slips, causing acceleration to lag behind engine speed.

Inspection

Check freeplay.

Freeplay:

3/8 - 13/16 in (10 - 20 mm)

If necessary, adjust to the specified range.

Improper freeplay adjustment can cause premature clutch wear.