


Starting Procedure

To restart a warm engine, follow the procedure for “High Air Temperature”.

Normal Air Temperature

$10^{\circ} - 35^{\circ}\text{C}$ ($50^{\circ} - 95^{\circ}\text{F}$)

1. Pull the choke knob (1) out all the way to Fully ON (A), if the engine is cold.
2. Start the engine, leaving the throttle closed.

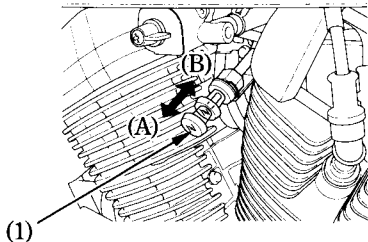

(1) Choke knob

(A) Fully ON

(B) Fully OFF

Do not open the throttle when starting the engine with the choke ON. This will lean the mixture, resulting in hard starting.

NOTICE

Operating the engine with insufficient oil pressure can cause serious engine damage.

3. Immediately after the engine starts, operate the choke knob (1) to keep fast idle.
4. About a half minute after the engine starts, push the choke knob (1) in all the way to Fully OFF (B).
5. If idling is unstable, open the throttle slightly.