



1. Pull back the rubber dust cover (2). Loosen the lock nut (3) and turn the adjuster (4). Tighten the lock nut (3) and check the adjustment.
2. If the adjuster is threaded out near its limit or if the correct free play cannot be obtained, loosen the lock nut (3) and turn in the cable adjuster (4) completely. Tighten the lock nut (3) and pull on the dust cover.

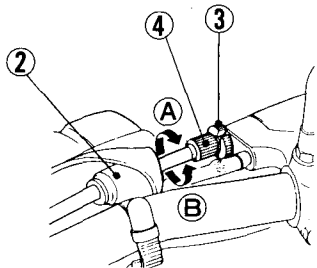

- (2) Dust cover (A) Increase free play
 (3) Lock nut (B) Decrease free play
 (4) Brake cable adjuster

3. At the lower end of the cable, loosen the lock nut (6). Turn the adjusting nut (5) to obtain the specified free play. Tighten the lock nut (6) and check the adjustment.

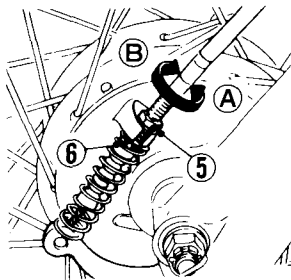

- (5) Adjusting nut (A) Increase free play
 (6) Lock nut (B) Decrease free play