


FUEL SYSTEM

AFTER '85: CARBURETOR


REMOVAL

Turn the fuel valve OFF and disconnect the fuel line and remove the seat and fuel tank (page 3-3). Loosen the drain screw and drain the float chamber. Loosen the carburetor connecting tube bands and remove the carburetor top.

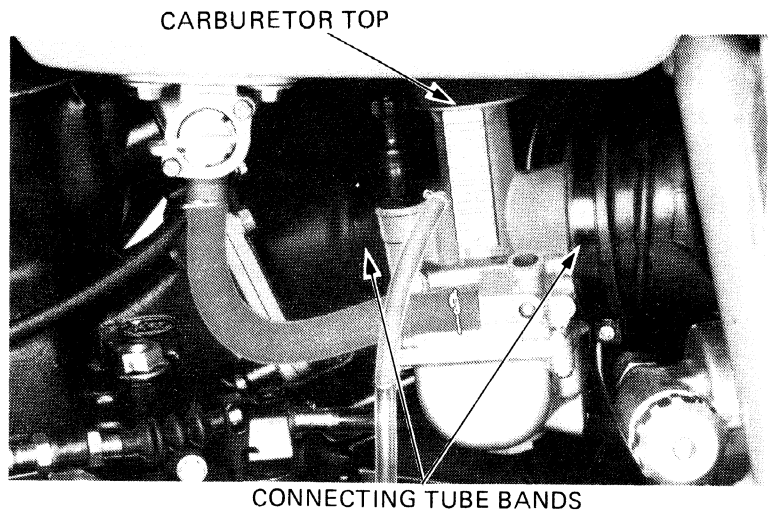

CARBURETOR DISASSEMBLY

Remove the carburetor top and pull out the throttle valve.

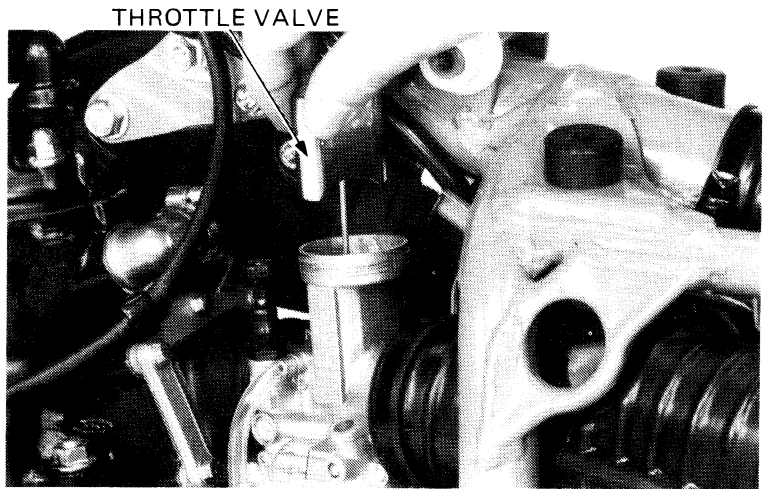

Remove the throttle cable from the cable holder.

Remove the throttle valve spring from the carburetor top.

