


## REAR SUSPENSION

---

Place the swing arm into the frame and install the pivot bolt and nut.  
Tighten the pivot nut.

**TORQUE: 70–110 N·m**  
**(7.0–11.0 kg·m, 51–80 ft·lb)**

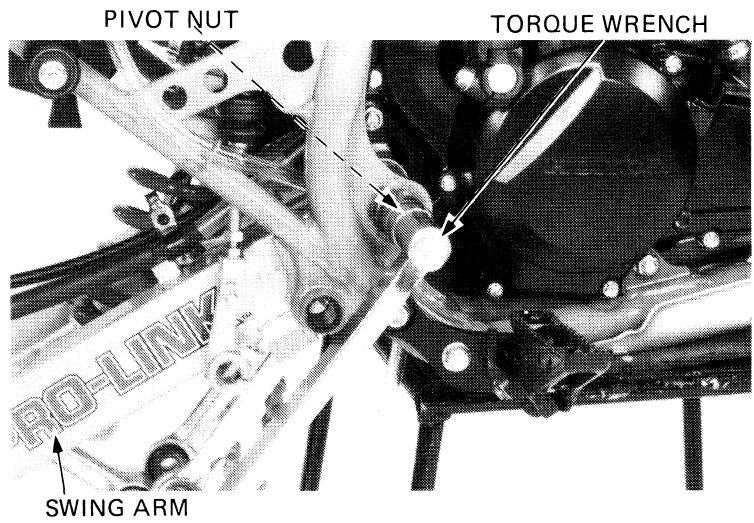

Install the dust seals.



Install the return spring onto the brake pedal spindle and install the brake pedal by hooking the return spring on the frame body.  
Secure the brake pedal by tightening the flange bolt (Page 12-15).

