

1. Squeeze the brake lever (or depress the brake pedal), open the bleed valve 1/2 turn and then close the valve.


NOTES

Do not release the brake lever (or pedal) until the bleed valve has been closed.

2. Release the brake lever (or pedal) slowly and wait several seconds after it reaches the end of its travel.

Repeat steps 1 and 2 until bubbles cease to appear in the fluid coming out of the bleeder valve. Tighten the bleed valve.

TORQUE: 4–7 N·m
(0.4–0.7 kg·m, 2.9–5.1 ft·lb)

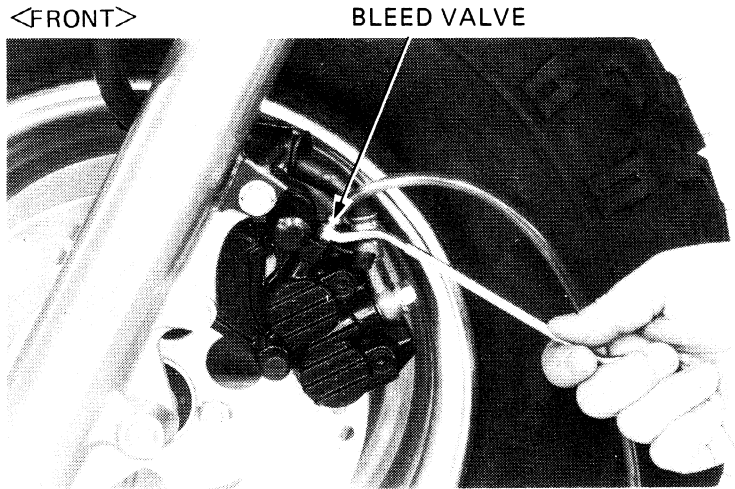

Fill the fluid reservoir to the upper level mark.
Reinstall the diaphragm and master cylinder cover.

WARNING

A contaminated brake disc or pad reduces stopping power. Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.

