


HYDRAULIC DISC BRAKES

Remove the boot and parking brake shaft from the parking brake base.



Check the boot for deterioration or damage.
Check the parking brake shaft and base threads for wear or damage.

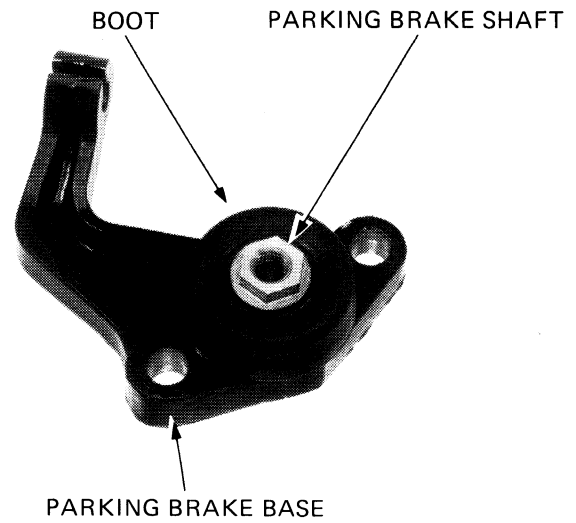

Apply grease to the parking brake shaft, position the shaft so that the punch mark is within the index marks on the parking brake base and thread the shaft into the parking brake base.

NOTE

Parking brake shaft has left hand threads.

Screw the parking brake shaft in fully, back it about 1/8 turn and make sure that the punch mark on the shaft is within the index marks on the base.

Install the boot over the shaft and base, making sure that the boot is seated in the groove in the shaft and base properly.

