

AFTER '85:

Unit: SANWA $\times k\Omega$
KOWA $\times 100 \Omega$


(-) \ (+)	SW	EXT	P-C	E1.2	IGN
SW		∞	∞	∞	∞
EXT	0.2-20		∞	∞	∞
P-C	50-1000	20-200		10-100	∞
E1.2	2-200	0.2-20	10-100		∞
IGN	∞	∞	∞	∞	

PULSE GENERATOR

Remove the fuel tank (Page 3-3).
Disconnect the pulse generator wire coupler.
Measure the pulse generator coil resistance between the coupler terminals.

PULSE GENERATOR COIL RESISTANCE:
50-200 Ω

For pulse generator coil replacement, refer to section 6.

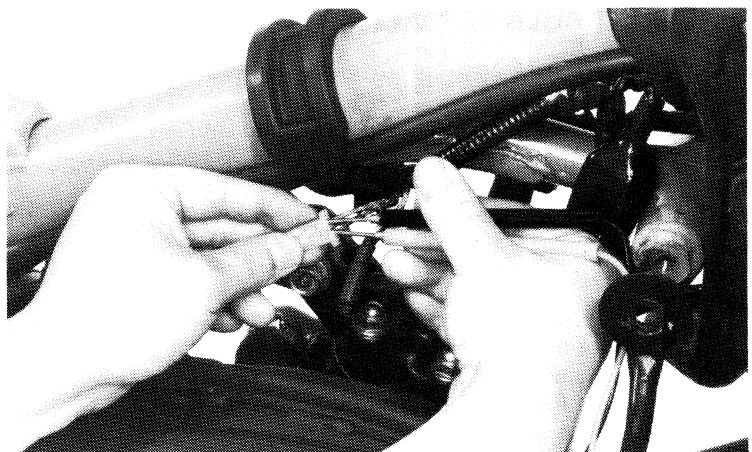

HEADLIGHT

HEADLIGHT BULB REPLACEMENT

Remove the headlight case from the front fork tubes by releasing the four retaining bands.

