



Front Suspension Adjustments

26. Clean the threads of the front brake caliper mounting bolts (29) and brake caliper thoroughly.
Apply locking agent to the bolt threads.
Install the brake caliper (24) on the slider and tighten the front brake caliper mounting bolts to the specified torque:
22 lbf·ft (30 N·m, 3.1 kgf·m)

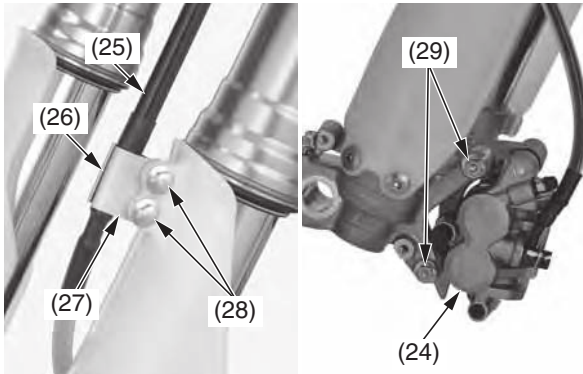


- (24) brake caliper
(25) brake hose
(26) stay B
(27) stay A
(28) brake hose clamp bolts
(29) front brake caliper mounting bolts

27. Clean the surfaces where the axle and axle clamps contact each other.
Apply grease to each dust seal lips of the front wheel.
Install the left side collar (30) and right side collar (31) into the wheel hub.

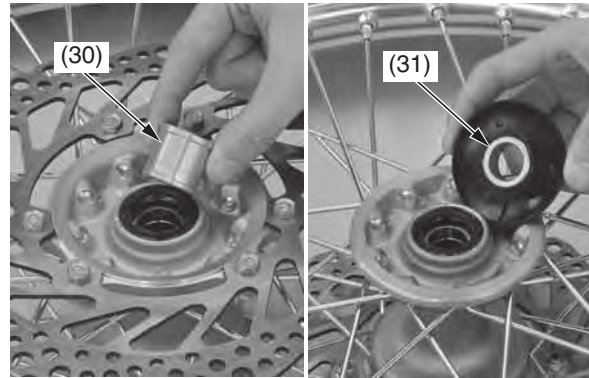

(30) left side collar (31) right side collar

28. Install the front wheel between the fork legs while inserting the disc between the pads, being careful not to damage the pads.
29. Insert the front axle shaft through the forks and wheel hub from the right side. Make sure that the front axle shaft is seated firmly onto the left fork leg clamp inner surface. Tighten the front axle nut (32) to the specified torque:
65 lbf·ft (88 N·m, 9.0 kgf·m)
Tighten the left axle pinch bolts (33) to the specified torque:
15 lbf·ft (20 N·m, 2.0 kgf·m)

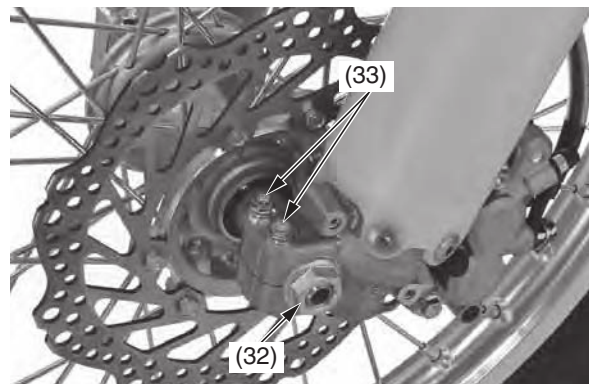

(32) front axle nut
(33) left axle pinch bolts

30. Install the handlebar (34), mounting rubbers, washers and handlebar lower holder nuts (35) and tighten the handlebar holder nuts to the specified torque:
32 lbf·ft (44 N·m, 4.5 kgf·m)



(34) handlebar
(35) mounting rubbers, washers and handlebar lower holder nuts

31. Install the number plate ([page 105](#)).

(cont'd)