


# Driver Controls

---

## Hill Start Assist (HSA) Switch (SXS1000M3L/M5L only)

The Hill Start Assist (HSA) switch is below the drive mode select lever.

HSA keeps the brake pressure applied briefly to help prevent the vehicle from rolling on inclines as you move your foot from the brake pedal to the accelerator pedal.

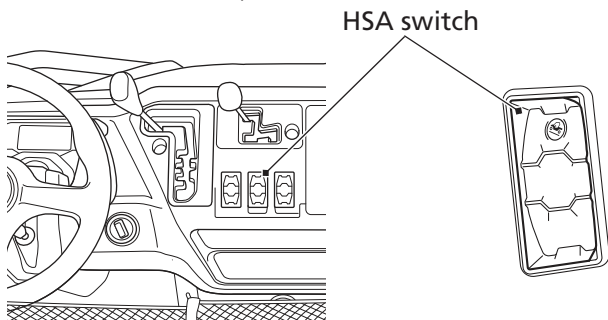

To operate HSA:

1. Press and hold the brake pedal to hold the vehicle.
2. Make sure the shift select lever is in "H" or "L" when facing uphill, or "R" when facing downhill.
3. Press and hold the HSA switch until the HSA indicator comes on.
4. Release the pressure from the brake pedal and apply the accelerator.
  - HSA is active for 1.5 seconds or until the accelerator is applied. HSA will self cancel if the accelerator is not applied within 1.5 seconds of pushing the HSA button.
  - HSA is not a parking brake.
  - HSA may not prevent the vehicle from rolling downhill if the vehicle is overloaded, on a steep hill, or sliding in slippery conditions.

### NOTICE

*Avoid prolonged Hill Start Assist (HSA) use, as continuous operation may cause the system to overheat and fail.*