


7. Check the clearances between each surface of the brake disc and the brake bracket (not the brake pads) are symmetrical.
- If the clearances are not symmetrical, loosen the left axle pinch bolts and pull the left fork outward or push inward to adjust the clearance.

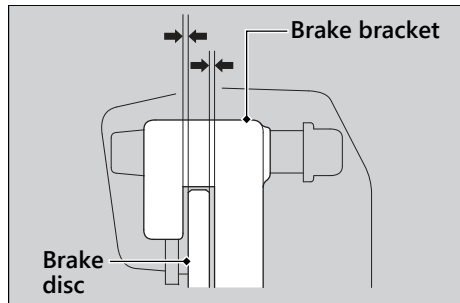

8. Tighten the right axle pinch bolts.

Torque: 16 lbf-ft (22 N·m, 2.2 kgf·m)

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

► Rear Wheel

Muffler Removal

1. Place your motorcycle on a firm, level surface.
2. Remove the right footpeg by removing footpeg bolt A, B and footpeg nut.

