




Tighten the generator rotor bolt.

TORQUE: 5.5–6.5 kg-m (40–47 ft-lb)

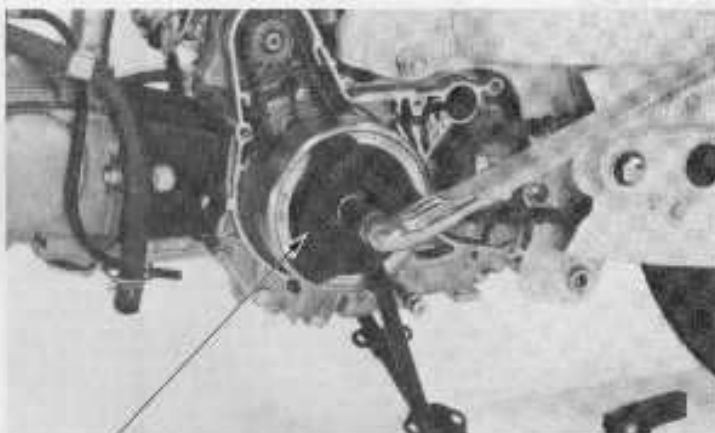

FLYWHEEL HOLDER 07922-179000 OR
U.S.A. ONLY – COMMERCIALY AVAILABLE
BAND STRAP WRENCH

STATOR INSTALLATION

Install the stator.

Route the generator leads properly.

Connect the neutral switch lead.

Install the left crankcase cover, drive sprocket cover and gearshift pedal.

Connect the generator wire coupler.

Install the right crankcase cover, footpegs/side stand and kick starter pedal.

Fill the crankcase with the recommended oil (page 2-2).

Adjust the ignition timing (page 3-9).

