




HANDLEBARS

RIGHT HANDLEBAR REMOVAL



Remove the screw and the handlebar grip end.

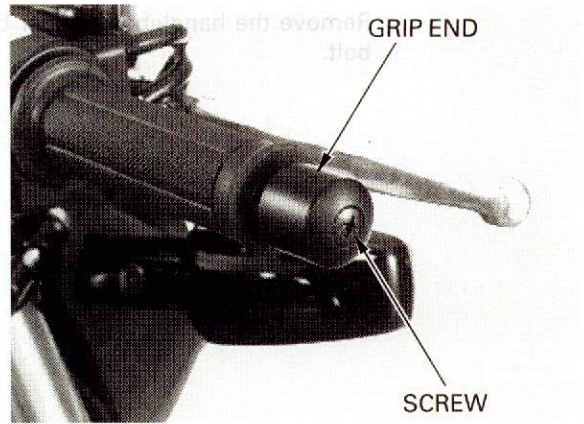

Remove the rearview mirror.
Disconnect the front brake switch wires connectors from the switch.
Remove the master cylinder holder bolts, holder and master cylinder assembly.

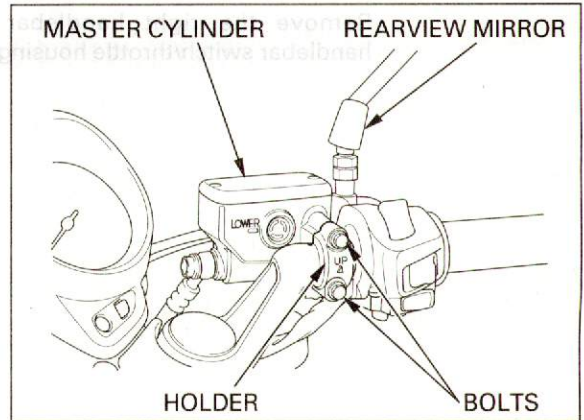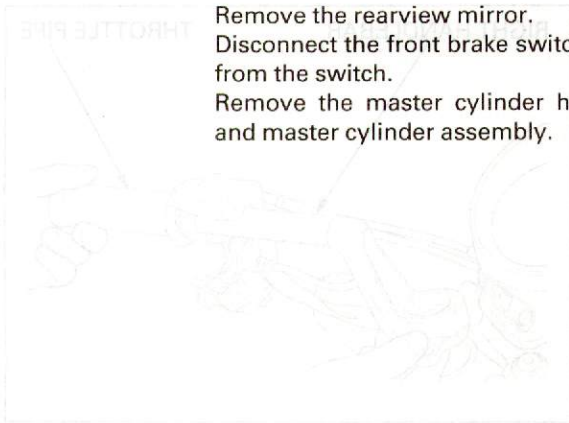

Remove the right handlebar switch/throttle housing screws.

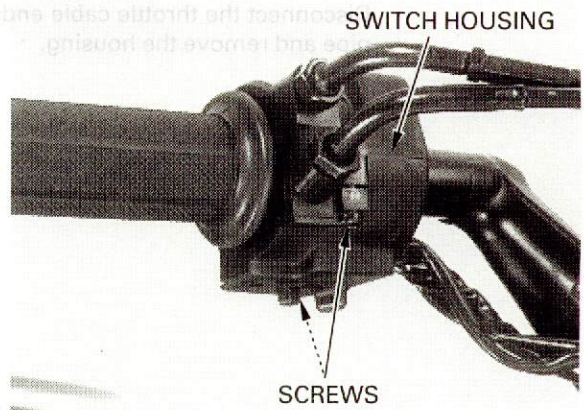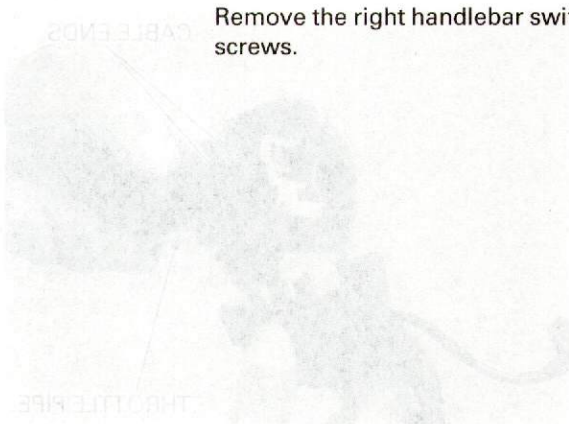

Remove the special bolts and top bridge cover.
Remove the right handlebar pivot cap.

