


HANDLEBAR SWITCHES

Disconnect the handlebar switch connectors.

Check for continuity between the wire terminals of the handlebar switch connector. Continuity should exist between the color coded wire terminals as follows:

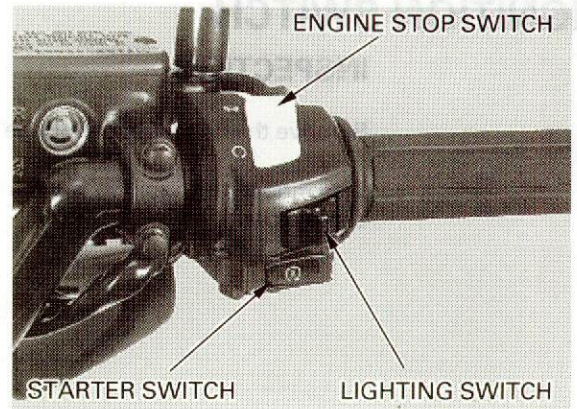

ENGINE STOP SWITCH

	IG	BAT
OFF		
RUN	○	○
COLOR	BI	W/BI

STARTER SWITCH

	ST	IG
FREE		
PUSH	○	○
COLOR	Y/R	BI

LIGHTING SWITCH

	BAT3	TL	BAT4	HL
•				
P	○	○		
H	○	○	○	○
COLOR	Br/Bu	Br/W	BI/R	Bu/W

TURN SIGNAL SWITCH


	W	R	L
R	○	○	
N			
L	○		○
COLOR	GR	SB	O

PASSING SWITCH

	BAT	Hi
FREE		
PUSH	○	○
COLOR	BI/R	•

DIMMER SWITCH

	HL	Lo	HI
Lo	○	○	
(N)	○	○	○
Hi	○		○
COLOR	•	W	Bu •

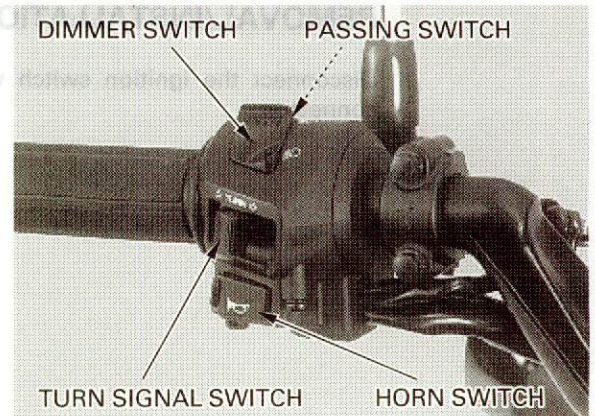

HORN SWITCH

	Ho	BAT
FREE		
PUSH	○	○
COLOR	Lg	BI/Br