


FRONT WHEEL REMOVAL/INSTALLATION

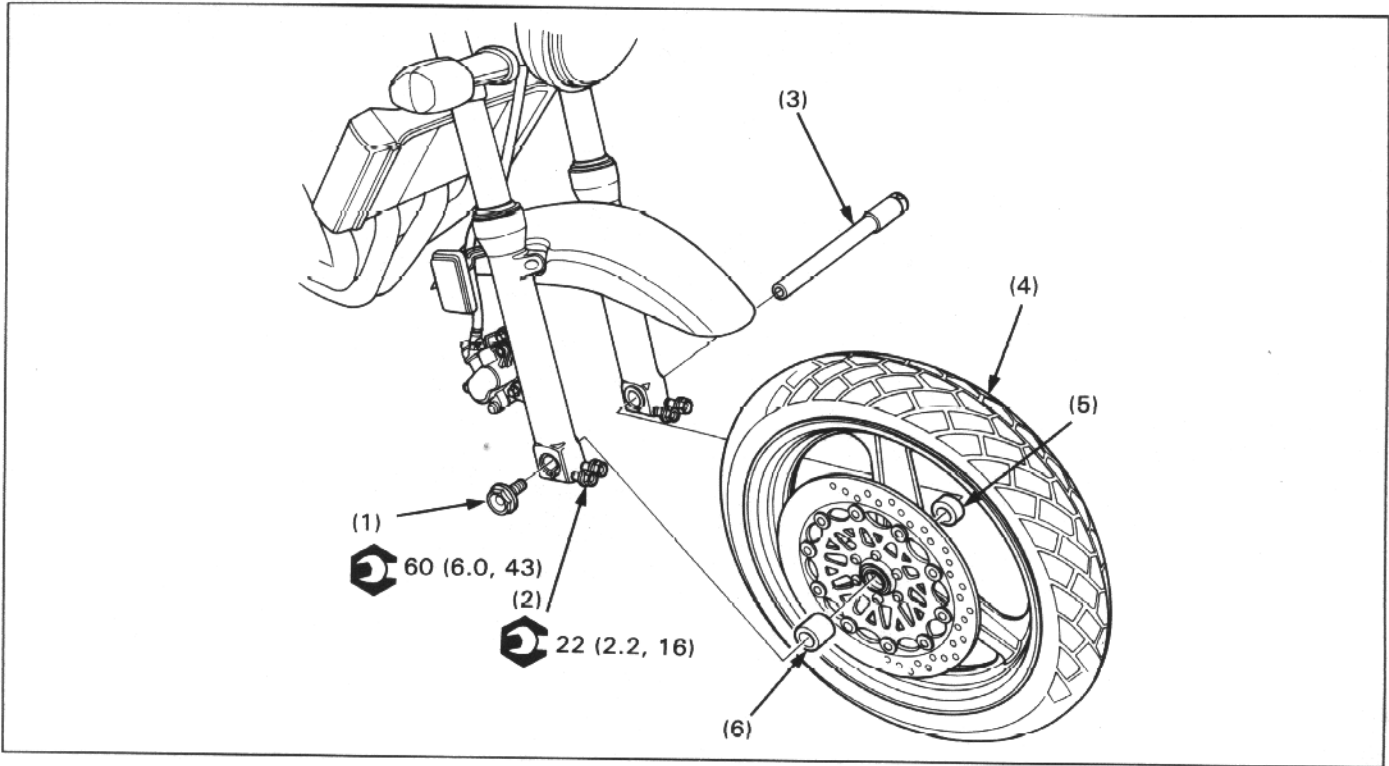

⚠ WARNING

- A contaminated brake disc or pad reduced stopping power. Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.
- Inhaled asbestos fibers have been found to cause respiratory disease and cancer. Never use an air hose or dry brush to clean brake assemblies. Use an OSHA-approved vacuum cleaner or alternate method approved by OSHA designed to minimize the hazard caused by airborne asbestos fibers.

CAUTION

- Do not use the oil filter as a jack point.

NOTE

- Do not depress the brake lever when the caliper is removed, or it will be difficult to refit the disc between the brake pads.

REQUISITE SERVICE

- Raise the front wheel off the ground by placing a jack or other support under the engine.

PROCEDURE	Q'ty	REMARKS
REMOVAL ORDER		• Installation is in the reverse order of removal.
(1) Axle bolt	1	
(2) Axle pinch bolt	4	Only loosen the bolts.
(3) Axle shaft	1	
(4) Front wheel assembly	1	
(5) Left side collar	1	Shorter one
(6) Right side collar	1	Longer one