
Exhaust System Removal/Installation

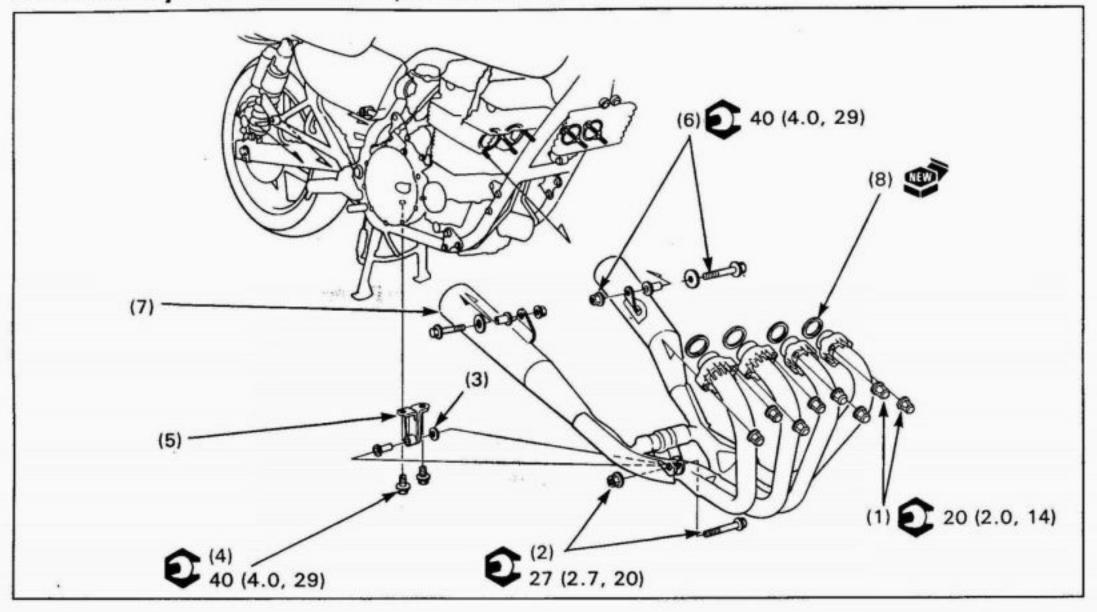

AWARNING

· Do not service the exhaust system while it is hot.

NOTE

 When installing the exhaust pipe/muffler, install all the fasteners loosely. Always tighten the exhaust pipe joint nuts first, then tighten the mounting fasteners.

Procedure		Q'ty	Remarks
(1) (2) (3) (4) (5) (6) (7) (8)	Removal Order Exhaust pipe joint nut Muffler center mounting nut/bolt Washer Muffler center stay mounting bolt Muffler center stay Muffler mounting nut/bolt Muffler assembly Gasket	8 — 1/1— 1 — 2 — 1 2 — 1 4	Installation is in the reverse order of removal. At installation, install all fasteners loosely and tighten the exhaust pipe joint nuts first.