


With the front brake applied, pump the fork up and down several times to seat the axle and check brake operation by applying the brake lever.




Tighten the left axle pinch bolts to the specified torque.

TORQUE: 22 N·m (2.2 kgf·m, 16 lbf·ft)

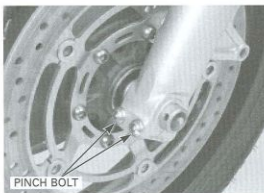

Check the clearance between the brake disc and caliper bracket on each side after installation. The clearance should be at least 0.7 mm (0.03 in).

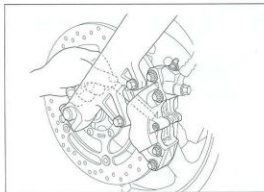

FORK

REMOVAL

- Remove the following:
- Front wheel (page 13-10)
 - Front fender (page 2-3)

