



Install the seat lock key cylinder into the rear fender B and secure it with retainer.
Connect the seat lock cable to the seat lock key cylinder and clamp it with cable clamp.

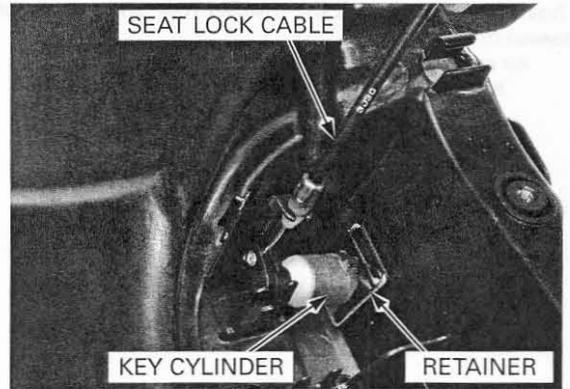


Hook the seat lock cable to the seat lock lever.

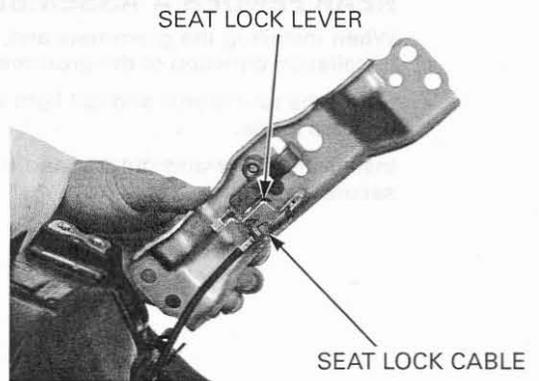

Install the passenger seat bracket.
Install the passenger seat bracket special bolts.
Install the passenger seat hooks and flange bolt.
Tighten the passenger seat bracket special bolts and flange bolts to the specified torque.

TORQUE: 26 N·m (2.7 kgf·m, 20 lbf·ft)

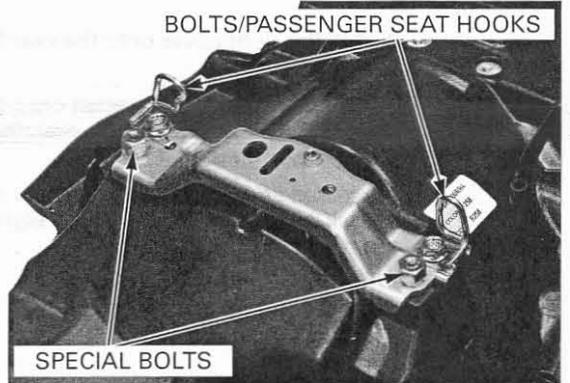

Install the passenger seat rear hook and tighten the pan screw securely.

