



## FUEL SYSTEM (Programmed Fuel Injection)

Route the hoses properly (page 1-24).

Connect the fuel tank drain hose and breather hose.

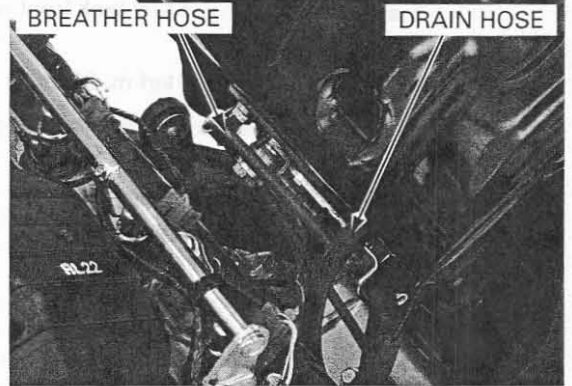

Connect the fuel pump unit 3P (Black) connector.

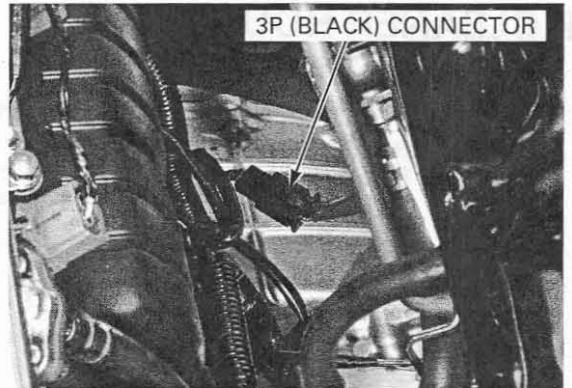

Remove the suitable support and close the fuel tank on the frame.

### NOTE:

- Route the hoses, wires and harness properly (page 1-24).
- Be careful not to damage the harness and hoses.
- Do not twist the breather hose or proper fuel supply would be obstructed. Check the red line on the breather hose.

After installing the fuel tank, make sure the drain, breather and fuel hoses are not kinked or bound.

