


HYDRAULIC BRAKE


REAR:

Remove the rear seat cowl (page 3-5).

Remove the screws, reservoir cap, set plate and diaphragm.

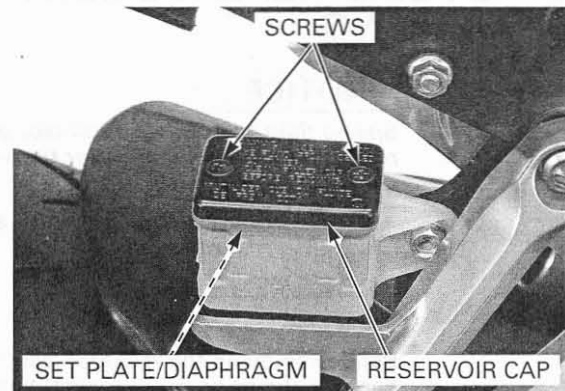

Connect a bleed hose to the caliper bleed valve. Loosen the bleed valve and pump the brake pedal. Stop pumping the brake pedal until no more fluid flows out of the bleed valve.

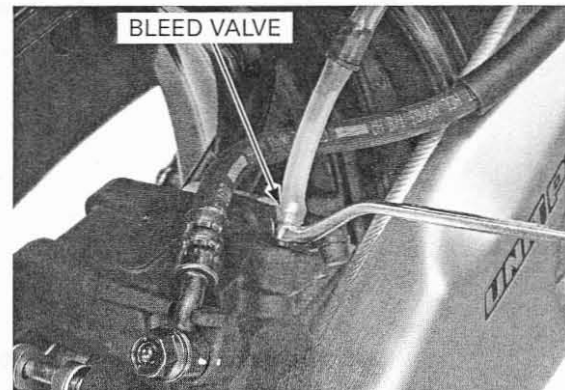

BRAKE FLUID FILLING/AIR BLEEDING

NOTE:

- Use only DOT 4 brake fluid from a sealed container.
- Do not mix different types of fluid. They are not compatible.
- Do not allow foreign material to enter the system when filling the reservoir.

FRONT:

Close the bleed valves.

Fill the reservoir with DOT 4 brake fluid from a sealed container.

