

REAR BRAKE CALIPER


NOTICE

Spilled fluid can damage painted, plastic, or rubber parts. Place a shop towel over these parts whenever the system is serviced.

REMOVAL


Drain the rear brake hydraulic system (page 16-7).

Avoid spilling fluid on painted, plastic, or rubber parts. Remove the oil bolt, sealing washers and brake hose eyelet joint.

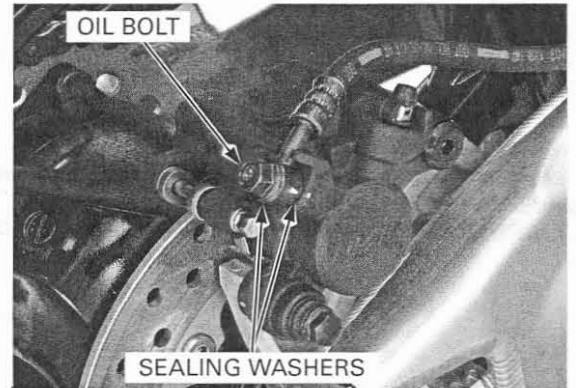

Remove the caliper mounting bolt and the brake pads (page 16-13).

Pivot the caliper up and remove it from the caliper bracket.

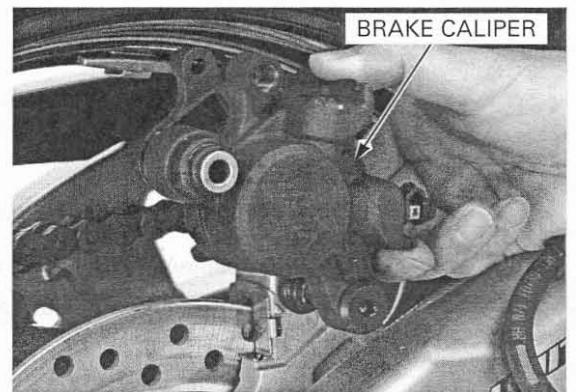

DISASSEMBLY

Remove the pad spring, collar and boot from the caliper body.

