

HYDRAULIC BRAKE

REAR BRAKE CALIPER

NOTICE


Spilled fluid can damage painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.

REMOVAL

Drain the rear brake hydraulic system (page 16-6).

Avoid spilling fluid on painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.


Remove the oil bolt, sealing washers and brake hose eyelet joint.

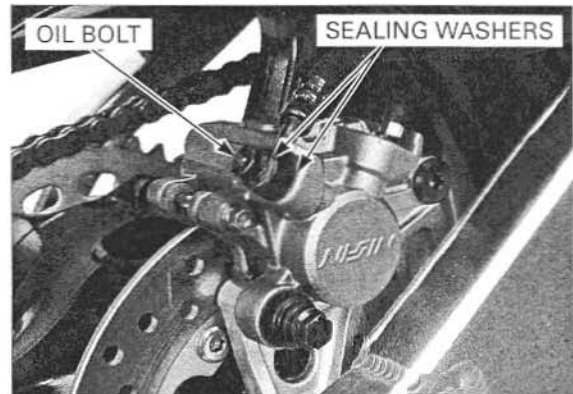

Remove the caliper mounting bolt and the brake pads (page 16-11).

Pivot the caliper up and remove it.

Remove the pad retainer.

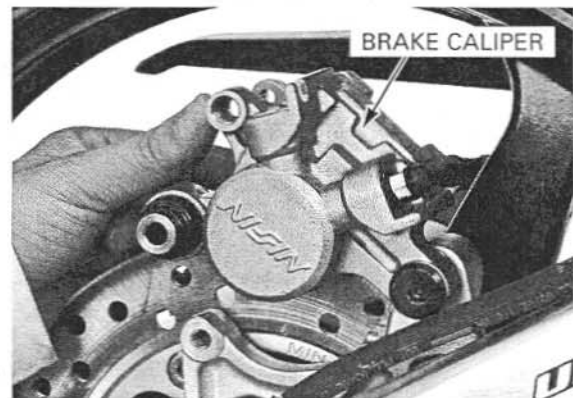

DISASSEMBLY

Remove the pad spring, collar and boot from the caliper body.

