


Push drum shifter ratchet pawl and assemble guide plate

* Take care not to drop ratchet pawl, ratchet spring and pawl flange

Once drum shifter and guide plate are assembled, assemble in drum centre

Install 2 bolts into guide plate

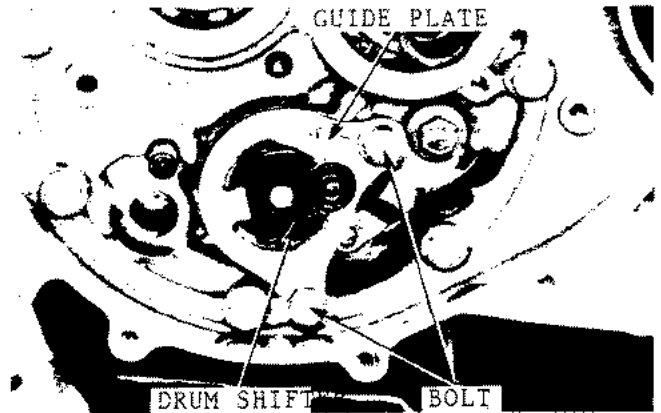

Install shifter collar

Install gear shift spindle and thrust washer


* After assembling turn gear shift spindle and check linkage operation

Align shift change pedal and spindle punch mark and install pedal

Tighten bolts

Torque: 1.0-1.4 kg-m

Install 2 bolts into gear shift linkage cover

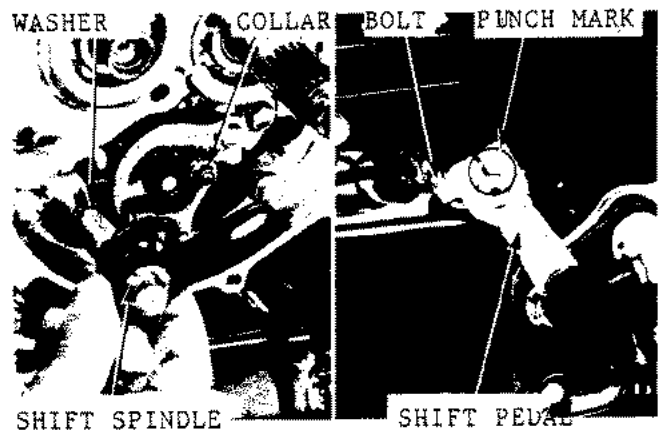

KICKSTARTER INSTALLATION

Apply molybdenum grease to pinion gear
Install each part into kickstarter spindle by hand

* Check that circlip is situated fully in groove
* Do not forget to install thrust washer
* Align collar shoulder with return spring and install

