


Use flywheel puller and remove flywheel

Special tool - Rotor Puller Attachment


07HMC-KV30100

Standard Tool - Flywheel Puller 07733-0010000

* Install the special tool puller as in the picture so that the puller thread does not enter the crankshaft thread

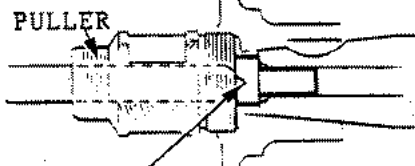

ROTOR PULLER ATTACHMENT

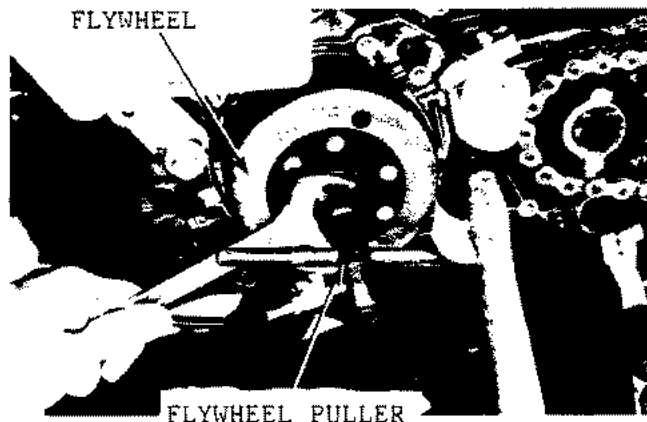


AC GENERATOR INSTALLATION

Install stator into crankshaft and tighten bolts

Torque: 1.0-1.4 Kg-m

Route AC Generator wires correctly and install grommet into case groove

Connect AC generator coupler (10.4)

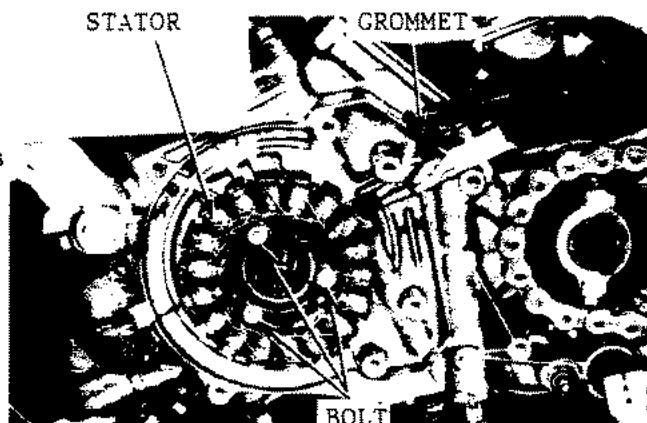

Install flywheel into crankshaft


* Remove all damaged and abnormalities from flywheel and stator and install

* Remove tape from crankshaft

Use the universal holder and fix flywheel
Install washer and flywheel bolt and tighten

Special Tool - Universal Holder 07725-0030000

Torque: 8.0-9.0 Kg-m

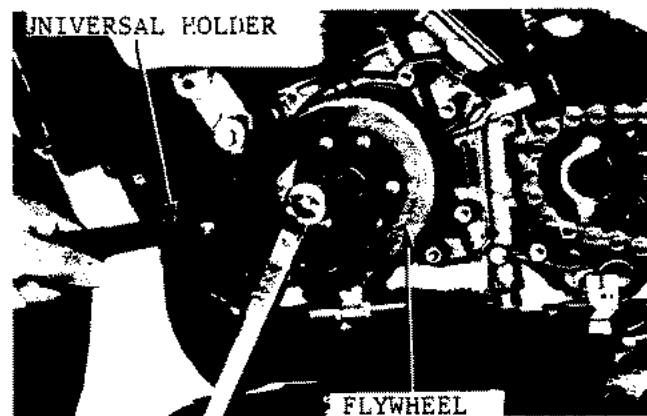

PULSE GENERATOR INSTALLATION

Install pulse generator

* Clamp AC generator wires, pulse generator wires correctly using clamber

Route pulse generator wire correctly and install grommet into case groove

Connect neutral switch

