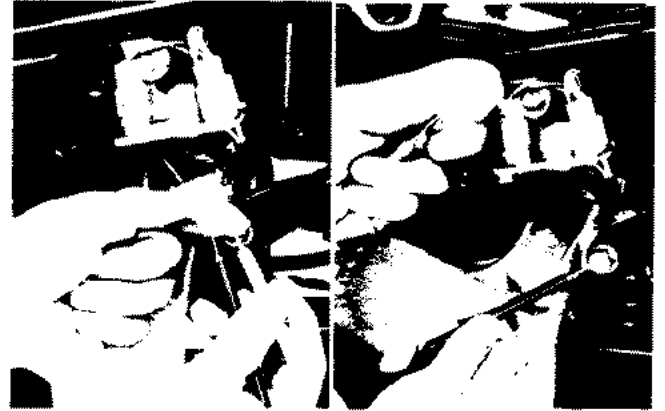

AC GENERATOR INSPECTION

Remove side covers
Remove AC generator 3P coupler connection
and measure resistance between yellow wires
of AC generator

Resistance: 0.2-0.9 ohm (20°C)

Check for no lead through each wire and earth

If resistance is not normal or there is lead
through wires an earth then replace AC
generator



* This measurement can be performed with AC
generator installed in engine