


FRONT WHEEL/SUSPENSION

Attach new gaskets to the brake discs.

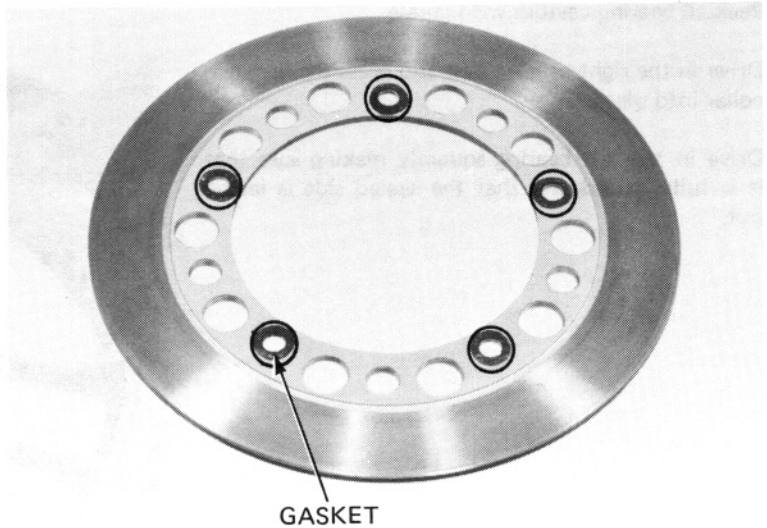


Install the brake discs onto the wheel hub.

TORQUE: 35–40 N·m (3.5–4.0 kg·m, 25–29 ft·lb)

Install the speedometer gearbox into the wheel hub, aligning the tangs with the slots.

Clean the brake discs with a high quality degreasing agent.

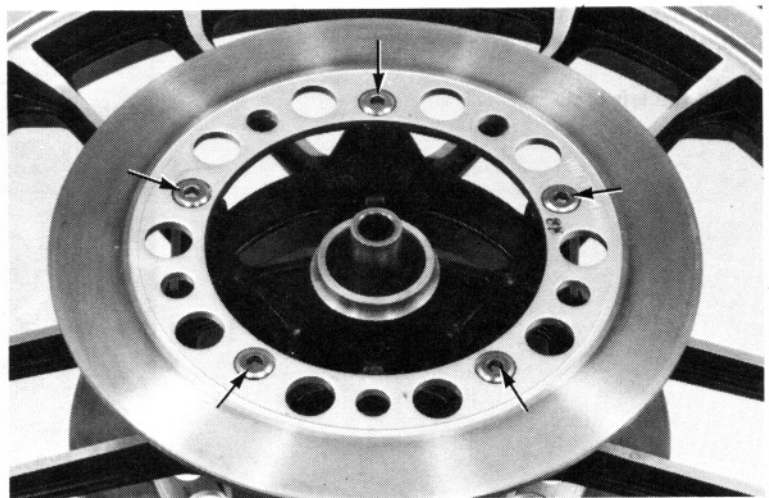

INSTALLATION

Fit the calipers over the discs, taking care not to damage the brake pads. Install the caliper mounting bolts.

TORQUE: 30–40 N·m (3.0–4.0 kg·m, 22–29 ft·lb)

Align the speedometer gearbox with the tang on the left fork leg as shown.

Tighten the axle to the specified torque.

TORQUE: 55–65 N·m (5.5–6.5 kg·m, 40–47 ft·lb)

