



## FUEL SYSTEM

Connect the air vent tubes to the air vent joints and install the tube bands as shown.

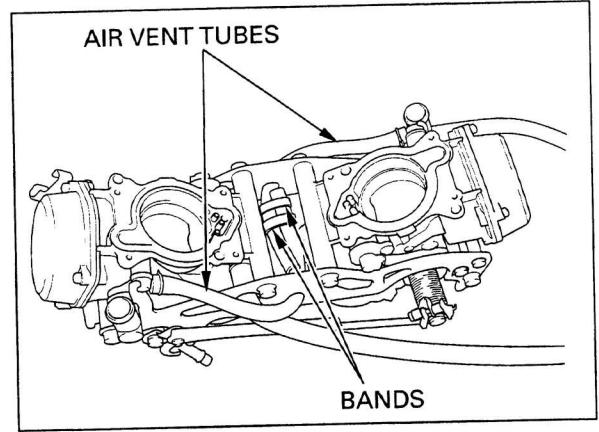


## CARBURETOR INSTALLATION

Install the SE valve into each carburetor and tighten the SE valve nut.

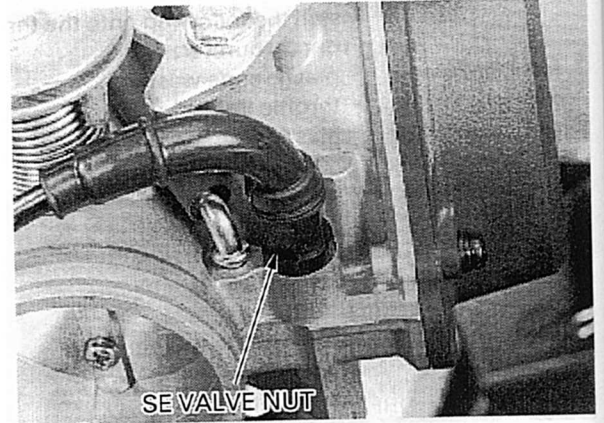

Connect the water inlet hose to the rear carburetor heater and the outlet hose to the front carburetor heater.

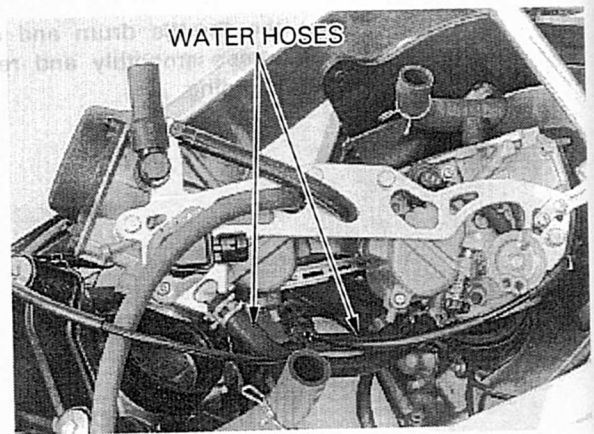

Connect the throttle cables to the throttle drum and install them onto the cable stay.

Adjust the throttle cable (page 3-4).

