



SWINGARM**REMOVAL**

Remove the left and right mufflers (page 2-5).
Remove the rear wheel (page 14-3).

Remove the two bolts and drive chain cover.

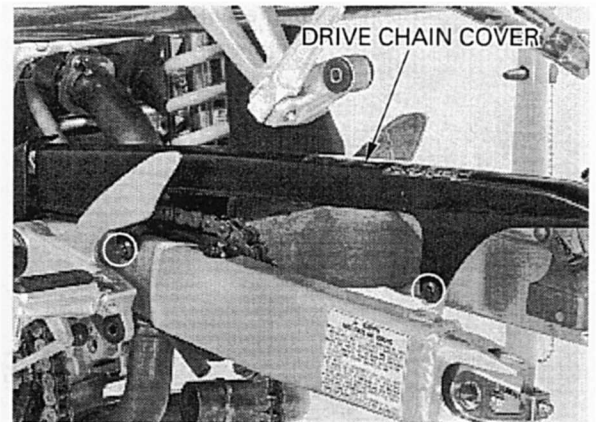

Remove the rear brake hose from the clamps and remove the rear brake caliper/bracket assembly from the swingarm.

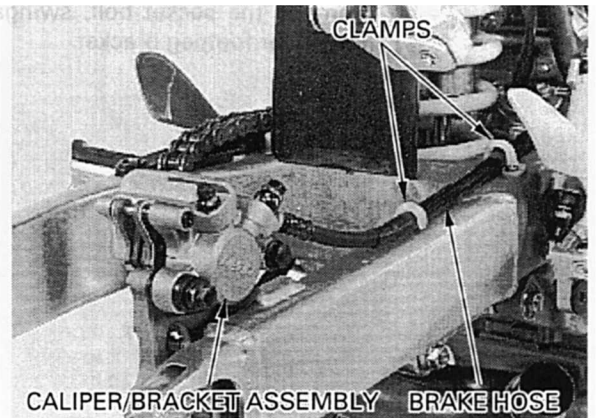

Remove the shock arm-to-swingarm nut and bolt.



Remove the left and right swingarm pivot caps.

