


HYDRAULIC BRAKE

Check the caliper pin boot and replace it if it is hard, deteriorated or damaged.
Apply silicone grease to the caliper pin and install the caliper onto the bracket.

Install the rear brake pads (page 15-6).

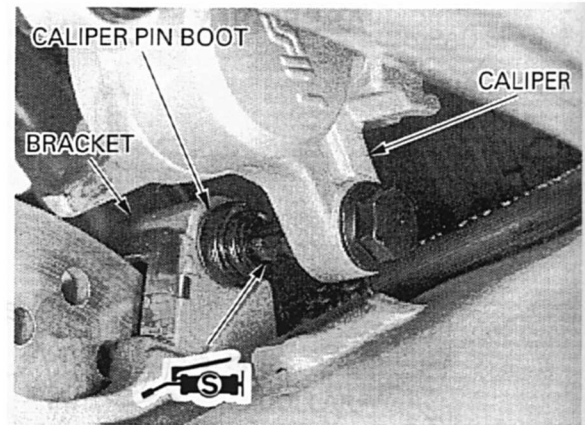

Connect the brake hose to the brake caliper with the oil bolt and new sealing washers, and tighten the oil bolt.

TORQUE: 34 N·m (3.5 kgf·m , 25 lbf·ft)

Fill and bleed the rear brake hydraulic system (page 15-3).

