


# REAR BRAKE CALIPER REMOVAL/INSTALLATION

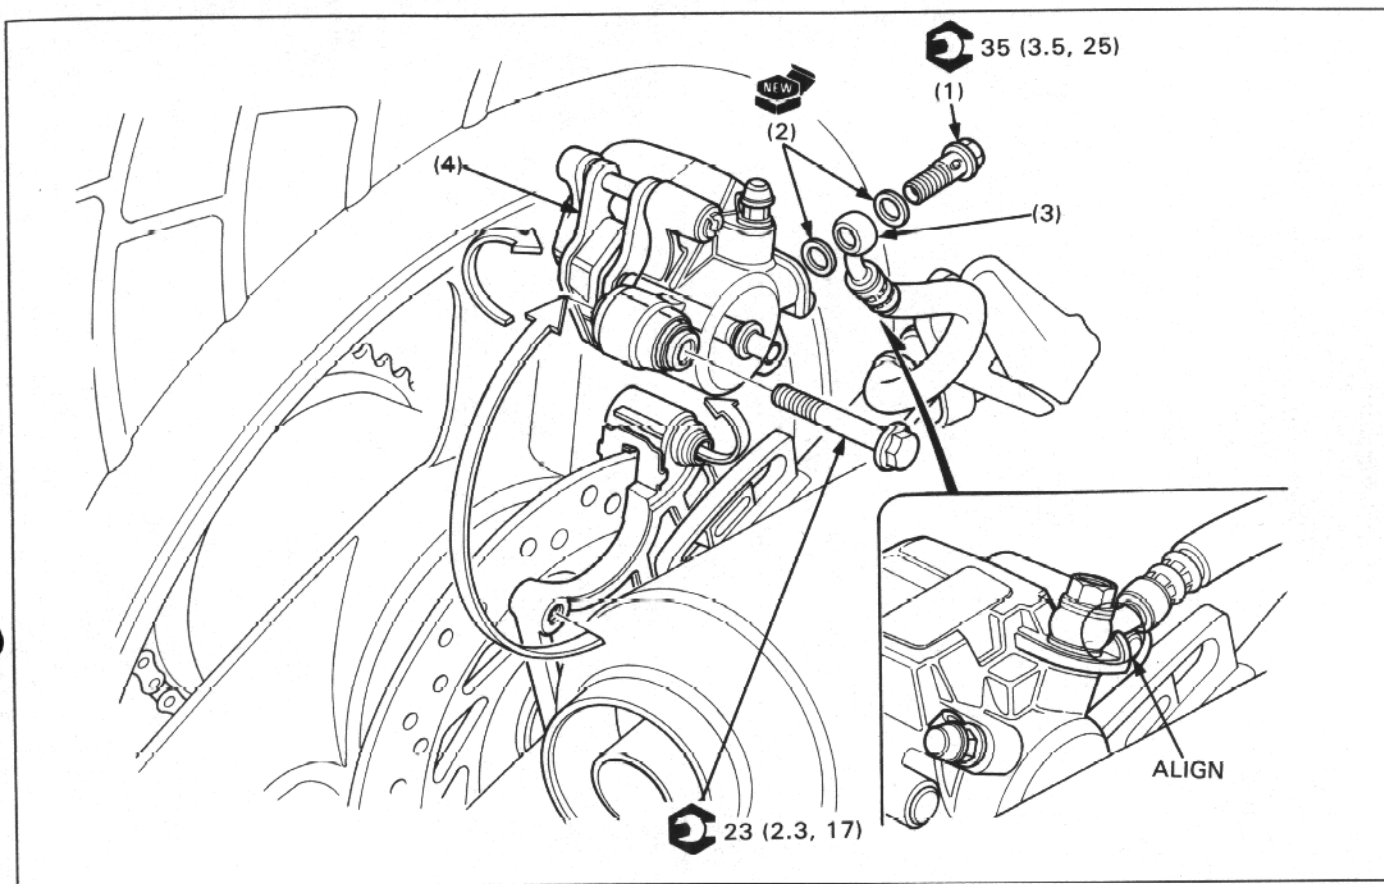

**▲ WARNING**

- A contaminated brake disc or pad reduces stopping power. Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.
- Inhaled asbestos fibers have been found to cause respiratory disease and cancer. Never use an air hose or dry brush to clean brake assemblies. Use an OSHA-approved vacuum cleaner or alternate method approved by OSHA designed to minimize the hazard caused by airborne asbestos fibers.

**NOTE**

- Before disconnecting the brake hose (1), place a pan under the caliper to catch the draining fluid and squeeze the brake lever slowly to push out the piston.

**REQUISITE SERVICE**

- Brake pad removal/installation (page 13-3)
- Brake fluid replacement/air bleeding (section 17 of the Common Service Manual)

PROCEDURE		Q'ty	REMARKS
(1)	REMOVAL ORDER Brake hose bolt	1	• Installation is in the reverse order of removal. Temporarily install the caliper onto the bracket.
(2)	Sealing washer	2	
(3)	Brake hose	1	At installation, press the hose end against the stopper while tightening the hose bolt.
(4)	Rear brake caliper assembly	1	