

AIR CLEANER

Air Cleaner Filter

The air cleaner filter accumulates dust and must be cleaned periodically. If the FOURTRAX is ridden in dusty areas, the filter must be cleaned at more frequent intervals than specified in the Maintenance Schedule.

If the FOURTRAX is submerged in water, the filter should be checked and water should be drained from the case before starting the engine.

To clean the air cleaner filter:

1. Remove the seat by pulling up the seat lock lever (Fig. 4-5).
2. Unlatch the four retainer clips (2) and remove the air cleaner cover (3).

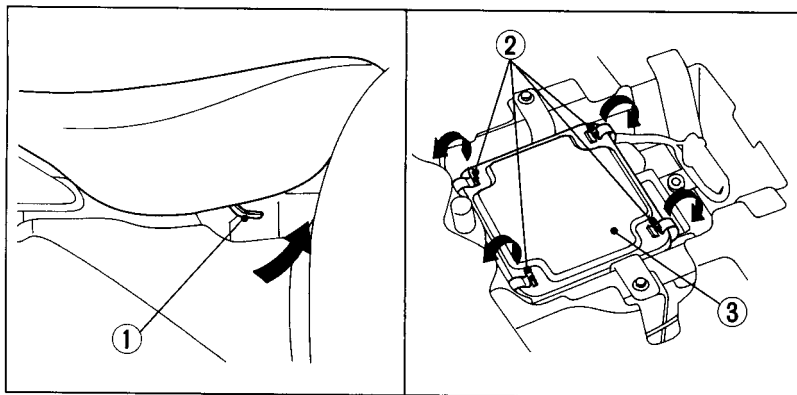


Fig. 4-5
(1) Seat lock lever

(2) Retainer clips
(3) Air cleaner cover