


5. Support your motorcycle securely and raise the front wheel off the ground using a maintenance stand or a hoist.
6. Remove the front axle shaft, front wheel and side collars.

### Installation

1. Attach the side collars to the wheel.
2. On the right side, place the wheel between the fork legs and insert the front axle shaft, through the right fork leg and wheel hub.
3. Align the index line of the front axle shaft with the recessed surface of the fork leg.

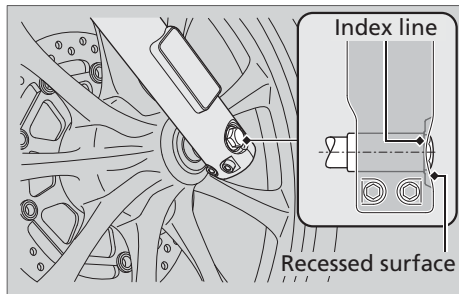

4. Tighten the right axle pinch bolts.

**Torque:** 16 lbf·ft (22 N·m, 2.2 kgf·m).

5. Tighten the front axle bolt.

**Torque:** 47 lbf·ft (64 N·m, 6.5 kgf·m).