


### CUSHION ARM PLATE INSPECTION

Inspect cushion arm plate for damage and warpage

If any abnormalities then replace

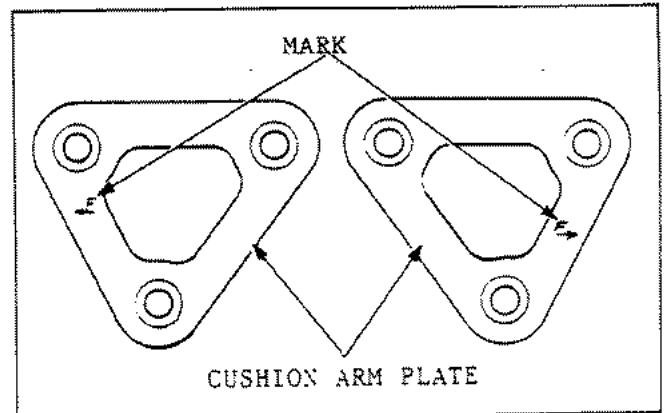


Set cushion arm plate, cushion conrod into installed position

\* Face cushion arm plate (F) mark forward and install

Install bolt

Torque: 6.0-7.0 kg-m

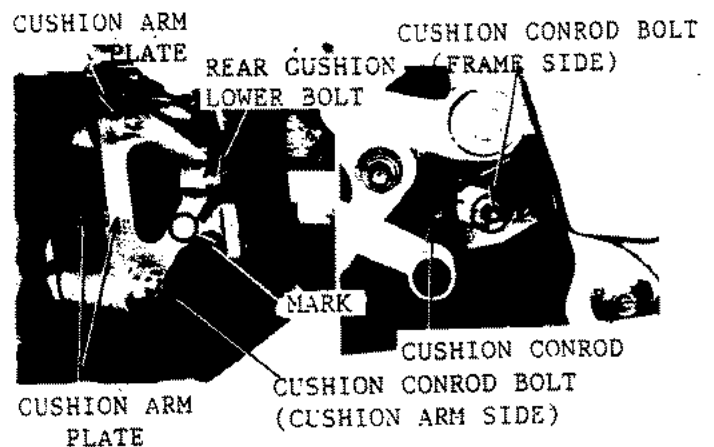


### REAR FORK

Removal

Raise frame and unweight rear wheel  
Remove rear wheel ( 13.3)  
Remove rear fender B ( 15.8)  
Remove rear caliper from rear fork

\* Hold caliper using tape or something  
\* Do not allow caliper to hang from brake hose

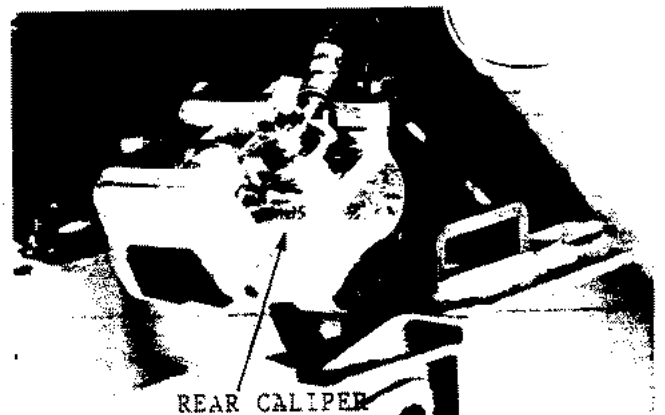

Remove cushion arm bolt and rear cushion lower bolt

Remove rear fork pivot nut

