


MAINTENANCE

Record the clearance for each valve for reference in shim selection if adjustment is required.


Check the valve clearance for the No.2 and No.4 cylinder exhaust valves using a feeler gauge.

VALVE CLEARANCE:

EX: 0.30 ± 0.03 mm (0.012 ± 0.001 in)

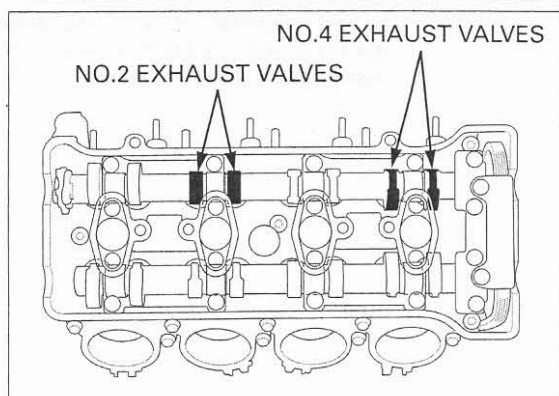

Turn the crankshaft clockwise 1/2 turn (180°), align the "T" mark on the crankshaft position sensor rotor with the index mark on the right crankcase cover.

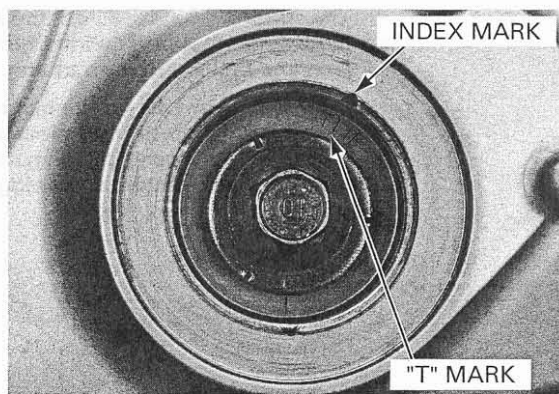


Record the clearance for each valve for reference in shim selection if adjustment is required.

Check the valve clearance for the No.2 and No.4 cylinder intake valves using feeler gauge.

VALVE CLEARANCE:

IN: 0.16 ± 0.03 mm (0.006 ± 0.001 in)

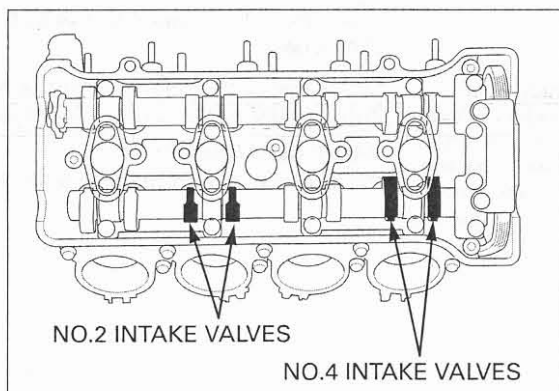

Turn the crankshaft clockwise 1/2 turn (180°), align the index line on the crankshaft position sensor rotor so that it is facing up as shown.

