


### Installation:

1. Position the front wheel between the fork legs and insert the front axle shaft from the left side, through the left fork leg and wheel hub.
2. Align the index line ( 6 ) of the front axle shaft with the surface ( 7 ) of fork leg.
3. Tighten the axle bolt to the specified torque:  
59 N·m (6.0 kgf·m , 43 lbf·ft)
4. Tighten the axle pinch bolts on the right fork leg to specified torque:  
22 N·m (2.2 kgf·m , 16 lbf·ft)
5. Install the right and left caliper assemblies to the fork legs and tighten the fixing bolts to the specified torque:  
30 N·m (3.1 kgf·m , 22 lbf·ft)  
To avoid damaging the brake pads while installing the caliper assemblies, carefully fit both brake discs between the pads.
6. Operate the front brake and pump the fork several times.  
Check for free wheel rotation after the brake lever is released. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

7. Tighten the front axle pinch bolts on the left fork leg to the specified torque:  
22 N·m (2.2 kgf·m , 16 lbf·ft)

If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

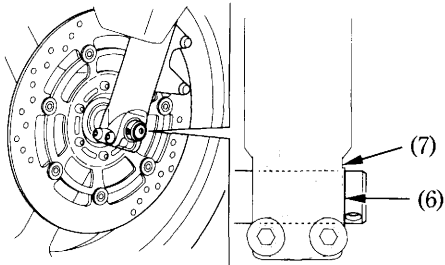

- (6) Index line  
(7) Surface